

Spare part list

part no	Description	Q'ty	part no	Description	Q'ty
1	Pump assembly	1	24	Nut	1
2	Handle	1	25	Bolt	2
3	Assembly cover	1	26	Rocker	1
4	Butterfly Nut	4	27	Gasket	4
5	Assembly tank body	1	28	Sealing washer	1
6	Hexagon Nut	4	29	Lock pin	4
7	Spring washer	4	30	retainer	8
8	Gasket	4	31	Pin	4
9	Universal Wheel	4	32	Hexagon bolt	1
10	Connector	1	33	Vane	1
11	Nut	1	34	Air inlet connector	2
12	Air valve	2	35	Air redirector	1
13	Air inlet seat	1	36	Paint outlet connector	1
14	Hose connector	1	37	Paint hose	1
15	Switch assembly	1	38	Filter seat	1
16	Air regulator assembly	1	39	Filter washer	1
17	Manometer	1	40	Filter net	1
18	Air inlet connector	2	41	Filter spring	1
19	Nut	2	42	Paint hose connector	1
20	hose	1	43	Nut	1
21	Air release valve	1	44	Paint outlet connector	1
22	Safety valve assembly	1	45	Air valve	1
23	Sealing washer	1			

